

IMPORTANT NOTICE

The BLE Remote **does not support voice control**, and the **voice button** on the device is not functional.

HOW TO USE BLE REMOTE TO CONTROL YOUR TV

Create Virtual IR Remote in App

- Follow the user manual included to add the eRemote to the LinknLink app and access the device page.
- Click the "+" button and select "TV" or "Set Top Box." Then, follow the on-screen prompts to create a virtual IR remote for your specific TV/STB. Make sure to test the buttons within the app to ensure they work correctly.

Pair BLE Remote

- Click "BLE Remote" at the top of the hub page and choose "Bluetooth Remote." Press and hold both the left and right keys on the BLE Remote simultaneously to enter pairing mode. Then, click "Next" in the app. The hub will automatically search for and pair with the BLE Remote.

Bind BLE Remote with TV/STB

- Access the BLE Remote page in the app and click any button you wish to bind on the physical BLE Remote.
- Choose the virtual IR remote you created earlier and select the specific button you want to bind with the chosen BLE Remote button.
- Once the binding is complete, pressing the corresponding physical button on the BLE Remote will trigger an IR command sent from the eRemote hub to control your TV/STB. No need to directly point the BLE Remote at your TV or maintain line-of-sight for it to function.

Use BLE Remote mini for LinknLink Routines

- Click the "Routines" tab at the bottom in the App and click "+" to create a Routine.
- Click to add an event under "When event triggers from" > "Device operated" > BLE Remote and select a key.
- Click to add an action under "Do actions" > "Control Certain Device" and select a device and specify the action. You can add multiple actions or scenes if you have more devices. Then save the routine.



LinknLink Pty Ltd

Manufacturer: Hangzhou LinknLink Technology Co., Ltd.
Address: Chatswood West, Sydney, 2067 New South Wales, Australia
Website: www.linknlink.com
Service & Support: support@linknlink-iot.com